



Panasonic Lumix DMC-TZ35 LCD Replacement

This guide will show you how to disassemble the Panasonic Lumix DMC-TZ35 camera in order to replace the LCD.

Written By: Philip Le Riche



INTRODUCTION

This is a fairly simple camera to take apart, just requiring a little care and patience. Most major components are very straightforward to replace and other components can be accessed quite easily too.


You will need a small cross-head screwdriver, and if you need to remove the sensor this will require a Torx screwdriver. A plastic spudger or opening tool is also useful to have.

Step 1 — Removing the back - 1





- Remove 2 screws on the right hand side of the case.
- Remove 2 screws on the left hand side of the case.

Step 2 — Removing the back - 2

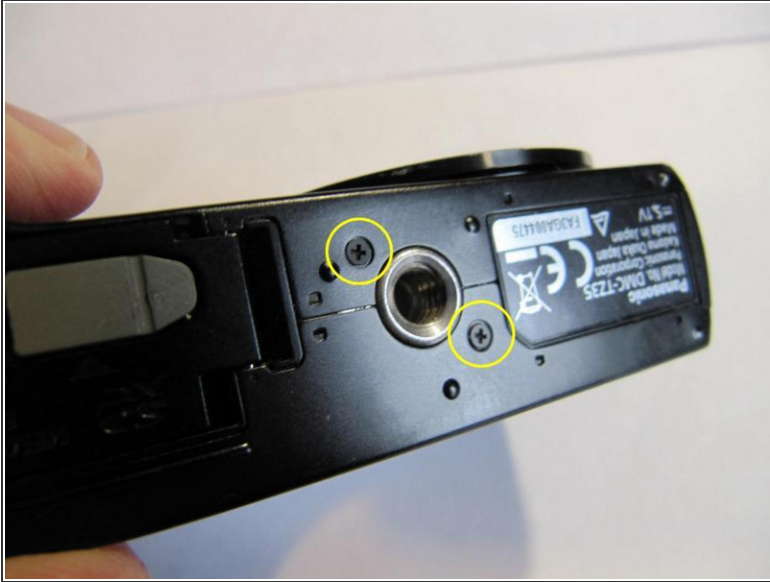

- Remove 2 screws on the bottom of the case, adjacent to the tripod mount. Note that these screws are slightly shorter than the previous ones and so should be kept separate.
- Ease off the case back. You can help it off by inserting a spudger in the crack on all sides to ease it, especially either side of any points where it seems reluctant to come.

Step 3 — Removing the buttons board

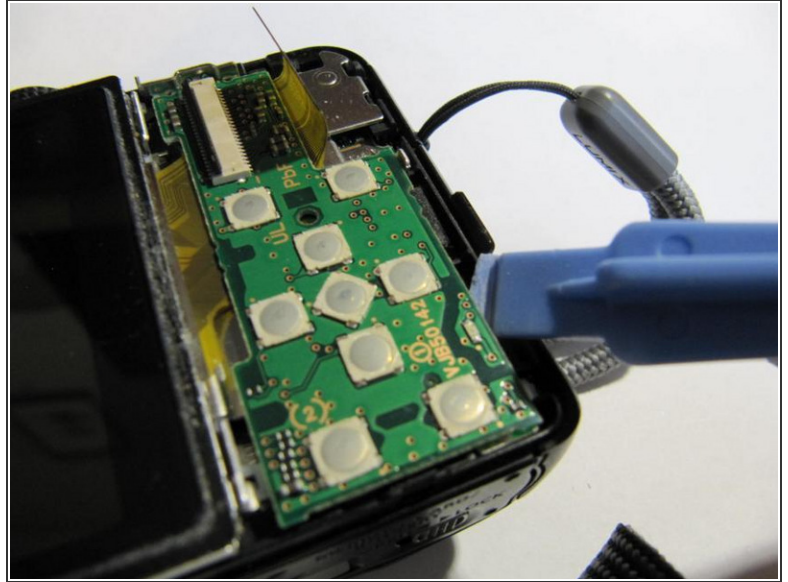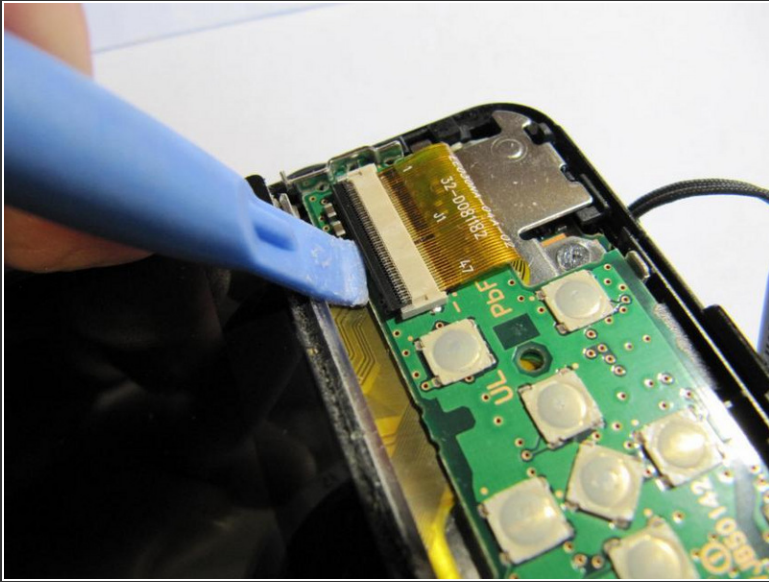

- Gently lift the locking bar on the LCD ribbon, then ease the ribbon out of the socket.
- Lift the buttons board by inserting a spudger under the bottom right hand edge. This will detach it from a connector beneath.

Step 4 — Removing the LCD



- Release a clip on the left hand side of the LCD and hence lift the LCD out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-21 04:53:24 PM.